



OPERATING INSTRUCTIONS



EMILE CHOURIET
GENEVE

Preface


Thanks for selecting Emile Chouriet watch.

Emile Chouriet, founded in Geneva, Switzerland, is a reputable Swiss watch brand. It is admired for the high precision timepieces, representing the best of Swiss watch making tradition. Every original Emile Chouriet watch is accompanied by an international guarantee card.

To use and maintain Emile Chouriet watch appropriately, please read this manual carefully and operate according to the relative instructions.

Mechanical watch-Dual Time-15.1168.G

Function description

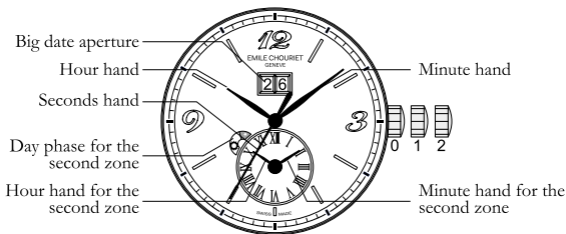

Position 0: Hand winding

Turn the crown forwards (clockwise) around 30 circles and the watch can get a full power reservation.

Position 1: Setting date

Pull the crown out to position 1.

Turn the crown backwards (anti-clockwise) to set the date quickly.

Push the crown back to position 0.

Position 2: Adjusting time

- 1 Pull the crown out to position 2 and the seconds hand will stop.
- 2 When turn the crown backwards (anti-clockwise), the hour hands and minute hands both in the main time zone and the second zone turn clockwise synchronously;
- 3 When turn the crown forwards (clockwise), the hour hand and minute hand in the main time zone turn anti-clockwise

synchronously; In the second time zone, just the minute hand turn anti-clockwise synchronously and the hour hand just come back a little.

- 4 Run the Step 2 and 3 repeatedly, set the watch to the desired time for the both zones.
- 5 Push the crown back to position 0 and the seconds hand will restart.

Note: To ensure the right position of the hour hand and minute hand for the second time zone, please first set the time of the main time zone one hour later (slower) than the desired time when turning the crown clockwise (in which case the hour hand of the second zone will not change synchronously). Then, turn the crown backwards (anti-clockwise) to set the hour hand and minute for both time zones into right position.

Setting the date/time

Example: setting the time to

21th (Date) 3:20PM for the main time zone and 9:20AM for the second zone.

- 1 Pull the crown out to position 1;
- 2 Turn the crown backwards (anti-clockwise) until date aperture indicates 20;
- 3 Pull the crown out to position 2 and the seconds hand will stop;
- 4 Turn the crown backwards (anti-clockwise) to make the hands turn clockwise, and set the time of the second zone to 9:20AM.
- 5 Turn the crown forwards (clockwise) to make the hands turn anti-clockwise, and set the time of the main zone to 2:20AM.
- 6 Turn the crown backwards (anti-clockwise) to make the hands turn clockwise; set the time of the main zone to 21th 3:20AM, and then the time of second zone appears 9:20AM exactly.

Emile Chouriet Warranty

Your Emile Chouriet watch is warranted for five years from the date of purchase under the terms and conditions of this warranty. The warranty is valid only if the warranty card is dated, fully and correctly filled in and stamped by an official Emile Chouriet seller.

With the warranty card, you will have the right to have any defect repaired free of charge during the warranty period. If we can not repair your watch to the normal condition of use, Emile Chouriet guarantees its replacement by an Emile Chouriet watch of identical or similar characteristics. The warranty period of the replacement watch is five years from the date of purchase of the replaced watch.

This manufacturer's warranty does not cover:

- The life of battery.
- Normal wear and tear and aging(e.g. scratched crystal; alteration of the color and /or material of nonmetallic strap and chains, such as leather, textile, rubber; peeling of electroplate, etc).
- Any damage on any part resulting from abnormal/ abusive use, lack of care, negligence, accidents, incorrect use of the watch and non-observance of the operating instructions provided by Emile Chouriet.

Emile Chouriet Warranty

- Any indirect damage resulting from misuse or from any failure to operate, defects or lack of precision.
- Any Emile Chouriet watch that has been handled by non-authorized persons or which has been altered from its original condition beyond the control of Emile Chouriet.

In addition to the above warranty services:

Any further claim against Emile Chouriet, e.g. for damages additional to the above described warranty is expressly excluded, except mandatory statutory rights the purchaser may have against the manufacturer.

Emile Chouriet is independent of any warranty that may be provided by the seller, for which he carries sole responsibility. This does not affect the purchaser's rights against the seller or any other mandatory statutory rights the purchaser may have against the seller.

Emile Chouriet customer service ensures the perfect maintenance of your Emile Chouriet watch. If your watch needs attention, rely on an official Emile Chouriet seller or an official Emile Chouriet Service Center listed in this manual book: they can guarantee service according to Emile Chouriet's standards.

In order to keep your watch timing accurate, efficient and durable, there are some special recommendations:

- **Magnetic fields:** Avoid placing your watch on loudspeakers or refrigerators, because they generate powerful magnetic fields, which may influence the accuracy of your watch.
- **Knocks:** Avoid knocks on your watch.
- **Temperature:** Your Emile Chouriet watch can accurately work in a daily temperature within 0°C- 50°C. Avoid exposure to extreme temperatures (higher than 50°C or lower than 0°C).
- **Chemical products:** Avoid contact with solvents, detergents, perfumes, cosmetics, as they may damage strap/bracelet, case, back and gasket.
- **Swimming:** Avoid wearing your watch for swimming or bathing very often, for the chemical products such as acid, alkali and salt in water, especially in seawater, may corrode watch strap/bracelet, case, back and gasket.
- **Water-resistance:** Water-resistance function of a watch cannot be permanently guaranteed, for the aging of gasket and the accidental knock to the crown. You'd better get water resistance test on your watch once a year in the Emile Chouriet official service center.
- **Cleaning:** For metal bracelets and water-resistant cases, in case of dirty, use a small brush with soapy water to clean and a soft cloth for drying.

Maintenance

- **Crown:** In daily wearing, for the screw-in crown, it should be carefully screwed in. For the non screw-in crown, it should be pushed in all the time to prevent penetration of water.
- **Chronograph push-buttons:** Avoid pressing chronograph push-buttons under water in order to prevent penetration of water.
- **Leather strap:** Avoid contact with water and moisture in order to prevent discoloration and deformation. Avoid direct exposure the leather strap in the sunlight, for it will lead to fading and cracking-off. Avoid contact with oily substance, acid, alkali or cosmetics, as these may damage straps.
- **Clasp:** The clasp, a vulnerable component and usually locked by friction or springs, may get rusted after contacting water. It can get a longer term use with a little lubricating oil in friction parts and springs. After too many times of open and close action, the clasp may become loose. In this case, we advise you to have it repaired in Emile Chouriet official service center in order to get a normal use.
- **Battery replacement:** Quartz watches will stop working when the power is exhausted. The battery must be replaced immediately in case the damage of movement by leaking liquid from the battery. Battery quality directly affects working period and time-keeping precision of the watch. We recommend that you contact an official Emile

Maintenance

Chouriet service center or authorized Emile Chouriet sellers, as they are institutions with all tools and apparatus required to carry out the work and the necessary checks in a professional manner.

Note: To avoid environmental pollution, do not discard used batteries in water or fire. Keep them out of the reach of children to prevent accidental swallowing.



- **Regular maintenance:** Like all precision instruments, watches need regular maintenance to ensure correct operation. Due to differences between models, climates and other conditions, the required maintenance frequency varies. Typically, you should go to an official Emile Chouriet service center for a comprehensive inspection on the watch every three to five years.
- **Quartz watch:** If your quartz watch will not be used for a few weeks or months, it is better to pull the crown out to the position in which the watch will stop. This will greatly save the battery power.



en.emilechouriet.com

