



OPERATING INSTRUCTIONS



EMILE CHOURIET
GENEVE

Preface

Thanks for selecting Emile Chouriet watch.

 
Emile Chouriet, founded in Geneva, Switzerland, is a reputable Swiss watch brand. It is admired for the high precision timepieces, representing the best of Swiss watch making tradition. Every original Emile Chouriet watch is accompanied by an international guarantee card.

To use and maintain Emile Chouriet watch appropriately, please read this manual carefully and operate according to the relative instructions.

Operating Instructions

Mechanical watch-Chronographs/moonphase-23.1168.G

Function description

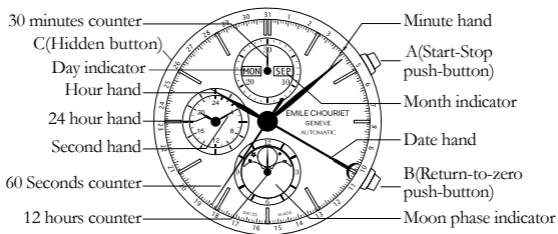

Position 0: Manual winding

Turn the crown forwards (clockwise) more than 35 circles to get a full power reservation.

Position 1: Setting date/day/month

Turn the crown backwards (anti-clockwise) to quickly adjust the date hand. And you can adjust the month by quickly adjusting the date hand.

Turn the crown forward (clockwise) to quickly adjust the moonphase.

Button C: Please use a specialized metal stick to press the button C to quickly adjust the day.

Note: The date/day/month cannot be set when the time is between 8:00 pm and 5:30 am.

Position 2: Adjusting time

The second hand in 9H will stop. Do not turn the hour and minute hands rotate anti-clockwise.

Example: Set the time to 8:00 am, Friday, June, 9th

- Pull the crown out to position 2:

Turn the crown backwards (anti-clockwise), adjust the hour and minute hands, recommended to 6 o'clock (avoid the restricted area);

- Push the crown back to position 1: Setting date/month/moonphase quickly;

(1) Setting month

Turn the crown backwards (anti-clockwise) to adjust the month by quickly adjusting the date hand until the correct month is displayed, which is JUN.

(2) Setting date

Turn the crown backwards (anti-clockwise) to adjust the date to the day before 9th, which is 8th;

(3) Setting moonphase

Check the full moon date and moonphase chart, the date of the last full moon is 4th, calculate the days n between the date of last full moon and 9th, that is, $9-4=5$;

Turn the crown forwards (clockwise) to quickly adjust so that the full moon appears in the center of the moonphase

window;

Continue to turn the crown forwards (clockwise) so that the moonphase jumps $n-1$ times, that is 4 times, to adjust the moonphase to the day before 9th.

(4) Setting day

Press button C to adjust the day to the day before Friday, which is THU;

Note: The day can be displayed in both Chinese and English.

 
- Pull the crown out to position 2:

Turn the crown backwards (anti-clockwise), observe the hands rotating and date/day/moonphase jumping, until the date, day, hour and minute hands indicate the 9th, FRI and 8:00 am, it is also the moonphase of 9th.

- Push the crown back to position 0 after the setting.

Mechanical watch-Chronographs-23.1168.G

Chronograph function

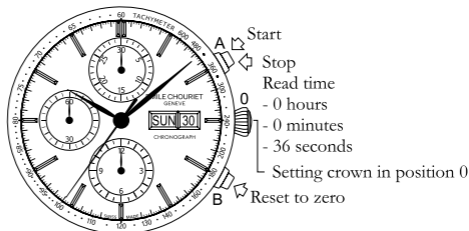

The chronograph function measures time up to 12 hours.


The hourcounter measures 12 hours per rotation.

The minute counter measures 30 minutes per rotation.

The second counter measures 60 seconds per rotation.

Example 1:

 - 1 Start: Press button A
- 2 Stop: Press button A again to stop timing, and then read the 3 chronograph hands: 2 hours, 10 minutes, and 08 seconds
- 3 Return to the position 0: Press button B, the 3 chronograph hands will reset to the position 0;

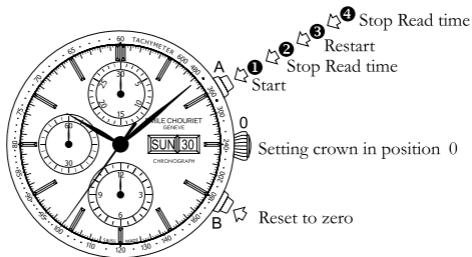

Example 2:

- 1 Start: Press button A to start timing
- 2 Pause: Press button A and read 3 chronograph hands;
- 3 Restart: Press button A to continue timing
- 4 Pause: Press button A to read the accumulated time; ...

Return to the zero position: Press button B, the 3 chronograph hands will be reset to the zero position;

Appendix-Full moon date and moonphase chart Full moon date

2023	2024	2025
7th January	26th January	14th January
6th February	24th February	12th February
7th March	25th March	14th March
6th April	24th April	13th April
6th May	23rd May	13th May
4th June	22nd June	11th June
3rd July	21st July	11th July
2nd August	20th August	9th August
31st August	18th September	8th September
29th September	17th October	7th October
29th October	16th November	5th November
27th November	15th December	5th December
27th December		



Emile Chouriet Warranty

Your Emile Chouriet watch is warranted for five years from the date of purchase under the terms and conditions of this warranty. The warranty is valid only if the warranty card is dated, fully and correctly filled in and stamped by an official Emile Chouriet seller.

With the warranty card, you will have the right to have any defect repaired free of charge during the warranty period. If we can not repair your watch to the normal condition of use, Emile Chouriet guarantees its replacement by an Emile Chouriet watch of identical or similar characteristics. The warranty period of the replacement watch is five years from the date of purchase of the replaced watch.

This manufacturer's warranty does not cover:

- The life of battery.
- Normal wear and tear and aging(e.g. scratched crystal; alteration of the color and /or material of nonmetallic strap and chains, such as leather, textile, rubber; peeling of electroplate, etc).
- Any damage on any part resulting from abnormal/ abusive use, lack of care, negligence, accidents, incorrect use of the watch and non-observance of the operating instructions provided by Emile Chouriet.

Emile Chouriet Warranty

- Any indirect damage resulting from misuse or from any failure to operate, defects or lack of precision.
- Any Emile Chouriet watch that has been handled by non-authorized persons or which has been altered from its original condition beyond the control of Emile Chouriet.

In addition to the above warranty services:

Any further claim against Emile Chouriet, e.g. for damages additional to the above described warranty is expressly excluded, except mandatory statutory rights the purchaser may have against the manufacturer.

Emile Chouriet is independent of any warranty that may be provided by the seller, for which he carries sole responsibility. This does not affect the purchaser's rights against the seller or any other mandatory statutory rights the purchaser may have against the seller.

Emile Chouriet customer service ensures the perfect maintenance of your Emile Chouriet watch. If your watch needs attention, rely on an official Emile Chouriet seller or an official Emile Chouriet Service Center listed in this manual book: they can guarantee service according to Emile Chouriet's standards.

In order to keep your watch timing accurate, efficient and durable, there are some special recommendations:

- **Magnetic fields:** Avoid placing your watch on loudspeakers or refrigerators, because they generate powerful magnetic fields, which may influence the accuracy of your watch.
- **Knocks:** Avoid knocks on your watch.
- **Temperature:** Your Emile Chouriet watch can accurately work in a daily temperature within 0°C- 50°C. Avoid exposure to extreme temperatures (higher than 50°C or lower than 0°C).
- **Chemical products:** Avoid contact with solvents, detergents, perfumes, cosmetics, as they may damage strap/bracelet, case, back and gasket.
- **Swimming:** Avoid wearing your watch for swimming or bathing very often, for the chemical products such as acid, alkali and salt in water, especially in seawater, may corrode watch strap/bracelet, case, back and gasket.
- **Water-resistance:** Water-resistance function of a watch cannot be permanently guaranteed, for the aging of gasket and the accidental knock to the crown. You'd better get water resistance test on your watch once a year in the Emile Chouriet official service center.
- **Cleaning:** For metal bracelets and water-resistant cases, in case of dirty, use a small brush with soapy water to clean and a soft cloth for drying.

Maintenance

- **Crown:** In daily wearing, for the screw-in crown, it should be carefully screwed in. For the non screw-in crown, it should be pushed in all the time to prevent penetration of water.
- **Chronograph push-buttons:** Avoid pressing chronograph push-buttons under water in order to prevent penetration of water.
- **Leather strap:** Avoid contact with water and moisture in order to prevent discoloration and deformation. Avoid direct exposure the leather strap in the sunlight, for it will lead to fading and cracking-off. Avoid contact with oily substance, acid, alkali or cosmetics, as these may damage straps.
- **Clasp:** The clasp, a vulnerable component and usually locked by friction or springs, may get rusted after contacting water. It can get a longer term use with a little lubricating oil in friction parts and springs. After too many times of open and close action, the clasp may become loose. In this case, we advise you to have it repaired in Emile Chouriet official service center in order to get a normal use.
- **Battery replacement:** Quartz watches will stop working when the power is exhausted. The battery must be replaced immediately in case the damage of movement by leaking liquid from the battery. Battery quality directly affects working period and time-keeping precision of the watch. We recommend that you contact an official Emile

Maintenance

Chouriet service center or authorized Emile Chouriet sellers, as they are institutions with all tools and apparatus required to carry out the work and the necessary checks in a professional manner.

Note: To avoid environmental pollution, do not discard used batteries in water or fire. Keep them out of the reach of children to prevent accidental swallowing.



- **Regular maintenance:** Like all precision instruments, watches need regular maintenance to ensure correct operation. Due to differences between models, climates and other conditions, the required maintenance frequency varies. Typically, you should go to an official Emile Chouriet service center for a comprehensive inspection on the watch every three to five years.
- **Quartz watch:** If your quartz watch will not be used for a few weeks or months, it is better to pull the crown out to the position in which the watch will stop. This will greatly save the battery power.



en.emilechouriet.com

